

Canon Photo Paper Plus SG-201 - photo paper - semi-glossy - 20 sheet(s) - A4 - 260 g/m²



In Stock(74)

SKU	1686B021
Product Description:	Canon Photo Paper Plus SG-201 - photo paper - semi-glossy - 20 sheet(s) - A4 - 260 g/m²
Product Type:	Photo paper
Surface Finish:	Semi-glossy
Media Size:	A4 (210 x 297 mm)
Printing Technology:	Ink-jet
Media Weight:	260 g/m²
Included Qty:	20 sheet(s)

General

Shipping Width:	24 cm
Shipping Depth:	33.6 cm
Shipping Height:	47.3 cm
Shipping Weight:	473 g

Compatibility Information

Media

Media Type:	Photo paper
Surface Finish:	Semi-glossy
Media Sizes:	A4 (210 x 297 mm)
Printing Technology:	Ink-jet
Included Qty:	20 sheet(s)
Media Weight:	260 g/m²

Compatibility Information

Compatible
with:

Canon BJ-10, 10 EX, 10 SX, 130, 20, 200, 200E, 230, 30, 300, 330, 5, 80, W3000, W3050, W9000 | Canon BJC-150, 210, 2100, 240, 3000, 4000, 4100, 4200, 4300 S, 4550, 4650, 4650 SP, 5000, 5100, 55, 5500, 600, 600 E, 6000 N, 610, 6100, 620, 6200, 6500, 70, 7000, 7100, 800, 800 PSW, 820, 8200, 8200 Photo, 85, 8500, 880 | Canon i250, 320, 350, 450, 455, 470D, 475D, 550, 560, 6500, 70, 80, 850, 865, 905D, 9100, 950, 965, 990, 9900, 9950 | Canon imagePROGRAF iPF500, iPF5000, iPF600, iPF700, iPF9000 | Canon MultiPASS 1000, C10, C100, C20, C30, C50, C530, C635, C70, C75, C80, L60, L90 | Canon PIXMA iP100, iP100 Bundle, iP100 with battery, iP1000, iP100wb, iP1200, iP1300, iP1500, iP1600, iP1600 Brockhaus, iP1700, iP1800, iP1880, iP1900, iP2000, iP2200, iP2500, iP2600, iP2700, iP2702, iP3000, iP3300, iP3500, iP3600, iP3680, iP4000, iP4000R, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4820, iP4850, iP5000, iP5200, iP5200R, iP5300, iP6000D, iP6210D, iP6220D, iP6310D, iP6320D, iP6600D, iP6700D, iP8500, iP90, iP90v, iX4000, iX5000, iX7000, MG8250, mini220, mini260, mini320, MP110, MP130, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP240, MP245, MP250, MP252, MP258, MP260, MP268, MP270, MP272, MP280, MP450, MP460, MP470, MP476, MP480, MP486, MP490, MP492, MP495, MP500, MP510, MP520, MP520 Everyday, MP530, MP540, MP545, MP550, MP560, MP600, MP600R, MP610, MP620, MP628, MP630, MP638, MP640, MP640R, MP750, MP760, MP780, MP800, MP800R, MP810, MP830, MP950, MP960, MP970, MP980, MP988, MP990, MP996, MX330, PRO-1, PRO-10, PRO-100, Pro9000, Pro9000 Mark II, Pro9500, Pro9500 Mark II, TS7450i | Canon PJ 1080A | Canon S100, 200, 200x, 300, 300 Photo, 330, 330 Photo, 400, 400x, 450, 450 Photo, 4500, 500, 520, 520x, 530D, 600, 630, 6300, 750, 800, 820, 820D, 830D, 900, 9000 | Canon SmartBase MP360, MP370, MP390, MP700 Photo, MP730 Photo, MPC190, MPC200 Photo, MPC400, MPC600F | Canon SELPHY DS700, DS810

